

## 6. Troubleshooting:

Problem	Solution
Dispenser does not operate and no LED showing	Check the cover is closed
	Check batteries are inserted correctly
	Check for dirt on sensor
LED Flashing	Check batteries are fresh and installed correctly
LED Flashing after soap cartridge change	Check correct cartridge is installed
	Check that cartridge nozzle is correctly located in the 3 locking positions
<b>For technical assistance call SPL LTD on 0800 SUPREME (7877 363)</b>	


## Supreme CLASSIC SOAP



## Installation Instructions

**1. Specifications:**

Dimensions (WxHxD)	278 x 130 x 120mm
Cartridge Capacity	1000ml
Battery	C size 1.5 x 4pcs Alkaline
Detection Range	100 mm
Room Temperature	4~40 °C
Dispensed Soap Quantity	~0.4ml
Applicable Soap Type	Foam Formulation

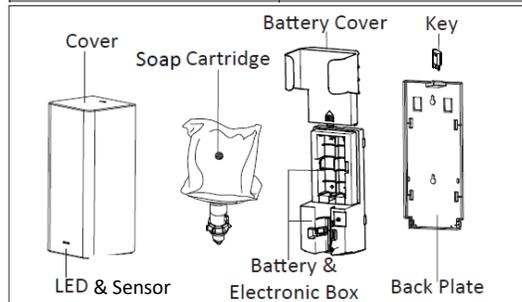**2. Item List:**

Item	Description	Q'ty
1	Soap Dispenser	1
2	Installation Manual	1
3	Key	1
4	Plastic Anchor	3
5	Mounting Screw	3

**3. Installation****\* Before Installation:**




1. Check the surface of wall is smooth and clean.
2. Note the distance between dispenser & counter top should not be less than 400mm (Fig.1)

**\* Installation Steps:**

1. Use key to unlock and open the soap dispenser outer cover (Fig.2)
2. Use the Soap Dispenser to mark the location for the top key hole fixing (1) (Fig.3)
3. Using mounting screws, loosely fit dispenser into key hole fixing (1)
4. Mark location of mounting holes (2 & 3). Remove dispenser and drill holes. (2 & 3) (Fig.4)
5. Mount dispenser and tighten screws (Fig.5)

**\* Option: Tape Installation (Adhesive on Mirror)**


1. Clean installation surface with isopropyl alcohol
2. Peel paper off of adhesive tape located on back of dispenser.
3. Press dispenser firmly onto mounting surface by applying pressure to the inside of backplate for 30 seconds. Do not load refill for at least 10 hours.

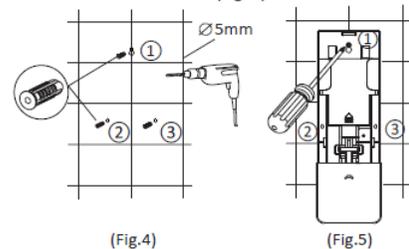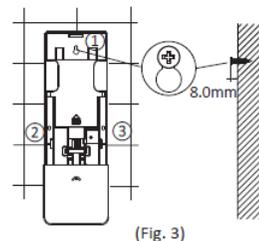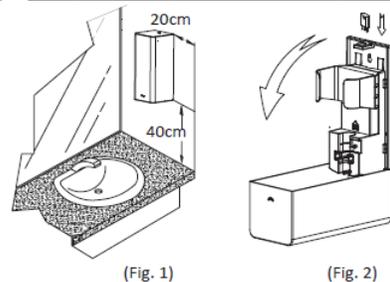

6. Remove the Battery cartridge cover, load 4 pcs alkaline C size 1.5V batteries into it and close battery cover. (Fig 6)
7. When installing the soap cartridge make sure that the nozzle assembly is located properly with actuation (1) holder (2) and location tab (3). Click into place (Fig. 7)

**Notice:**

Reverse battery polarities will lead to permanent damage to the dispenser electronics.

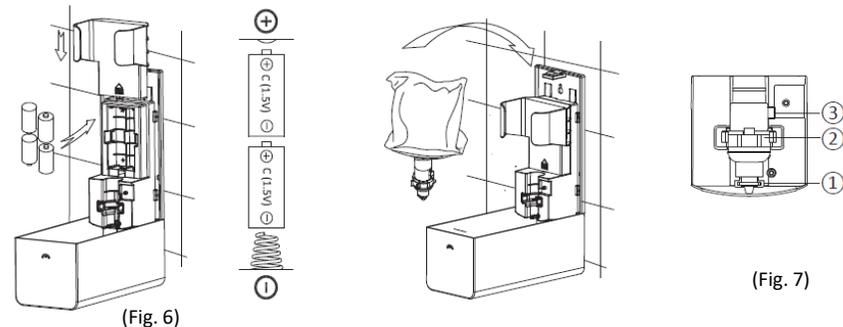**4. Operation:**

1. Close dispenser cover to liven electronics.
2. Place hand below dispenser to activate. Repeat this a couple of times to purge pump.
3. Replace depleted soap cartridges with the same type.
4. Low battery is indicated via LED flashing every 3 seconds.

**Note:** Do not mix old and fresh batteries.

**5. Maintenance:**

1. Beware of reflection from bright surfaces that may cause false activation.
2. Clean the appliance daily with a soft cloth and non-abrasive, non-caustic fluid.
3. Non operation can occur if soap cartridge is not located properly.