

SUPREME

JET DRY EX II



MAINTENANCE INSTRUCTIONS



Maintenance and Cleaning Instructions

Please Note: Failure to carry out regular maintenance and cleaning may cause internal damage to your machine, in this case the warranty will be invalidated.

Daily Cleaning

1. Switch the machine off at the wall or use the switch above the water collection tray.

NOTE: If using the machine's ON/OFF switch it is the larger one of the two.



2. Empty the water collection tray. To unlock the water tray slide the lock tab across. Remove the water tray and rinse with warm water.



3. Wipe down the machine using a warm damp cloth and a surface cleaner.

NOTE: Cleaning should be performed using a soft cloth and non abrasive and non caustic cleaning fluid to prevent malfunctions or damage to the unit.

Do not spray water directly into the machine.



4. Replace the water tray and lock back into place.



5. Turn power switch back on.

LED Display



LED indicates the water tray is full and requires immediate attention.



LED indicates HEPA filter needs replacing. The machine is designed to stop working shortly after this light has begun flashing and will reset upon replacement. Recommended replacement six monthly.

Weekly Cleaning

1. Switch the machine off as per daily cleaning instructions.
2. Pour a cup of warm water down the drain within the drying chamber.
3. Gently clean the drain using cleaning brush provided.
4. Remove water tray and empty its contents. Remove lid from water tray and rinse with warm water. Pay particular attention to removing soap scum from the two terminals.
5. Remove lint pre-filter holder located below water tray. Gently snap open the holder and brush away any lint on the filter. Then put the filter back together before putting back into machine.
6. Replace the water tray and lock back into place.
7. Turn power back on.



Register your Hand Dryer

Scan the QR code using the camera app on your smart phone.

Upon registering you will receive a 5% discount code for your first online order and we will send you one annual maintenance reminder email.

HEPA Filter Replacement

Failure to replace filters on time may interrupt air flow and overheat the motor, in this case the warranty will be invalidated.

1. Switch the machine off at the wall or use the switch above the water collection tray. Slide the lock tab across and remove the water tray.
2. Remove the lint pre-filter by pulling it out towards you.
3. Replace the lint pre-filter by gently snapping open the holder. Take out the old lint pre-filter and replace. Gently snap the lint pre-filter holder back together.
4. Remove HEPA from machine by pulling black holder downwards.
5. Remove HEPA filter and fragrance pod from holder and replace.
NOTE: Do not discard the holder.
6. Turn machine back on, wait for 10 seconds and then replace the filter.
7. Replace HEPA holder back into the machine. LED 3 will stay on for 5 seconds and then blink 3 times to indicate machine counter has reset.
8. Replace the water tray and lock back into place.



Purchase replacement HEPA filters online at: www.splwashrooms.co.nz