

# Hair Dryer PRO

## Ⓞ GB Operation Instructions



- Ergonomic safety release button
- One speed and heat setting
- Wall mounted, fixed wiring for security

220-240 V 50/60 Hz 1875 W



Read all instructions before use.



---

## Safety instructions



**Warning according to EN 60335-2-23:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**Warning according to IEC-Standard:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.**

### For appliances with wall holder:

The hair dryer must be fixed in such a way that the hand-held part, when the cable is fully extended, is out of reach of a person using a bath or shower. The hair dryer must be installed outside the reach of a person using a bath or shower.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not submerge in water, wet clean or use with wet hands. Never use hairspray while the appliance is switched on. Always disconnect from main after use. Never cover the air suction or exhaust opening.

---



Do NOT wind-up the cable.

### • Mains voltage

Connect only to current 220-240 V.

This appliance meets EEC directives:

Low voltage directive: 2014/35/EU

EMV directive: 2014/30/EU

### • The appliance is not suitable for sustained continuous use.

### • Overheating protection

The appliance switches off automatically in the case of thermal overload. When this happens, turn the switch to „0“ and eliminate the external causes of overheating. Once the appliance has cooled down it will be ready to use again. Defective hair dryers may only be repaired by qualified experts.

## CARE

As a general rule, the mains plug must be disconnected, or in the case of hair dryers with wall bracket, the switch on the wall bracket must be switched to "OFF": Wipe the appliance with a damp cloth. Air intake grille and filter (located behind the removable air intake grille) should be regularly cleaned or replaced if necessary.


## DISPOSAL



This product must be delivered at the end of its service life at a collection point for the recycling by electric and electronic devices.



## Safety Distances

Electric appliances must be wired to the electric circuit in a minimum distance of 60 cm from shower cabins and bath tubs and of 120 cm from shower heads.

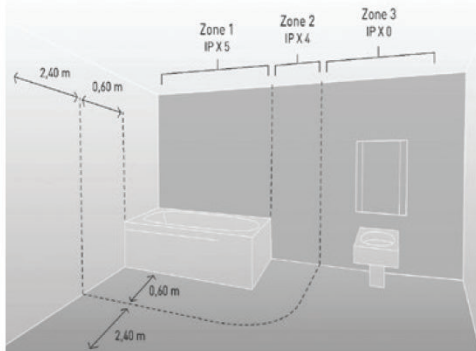

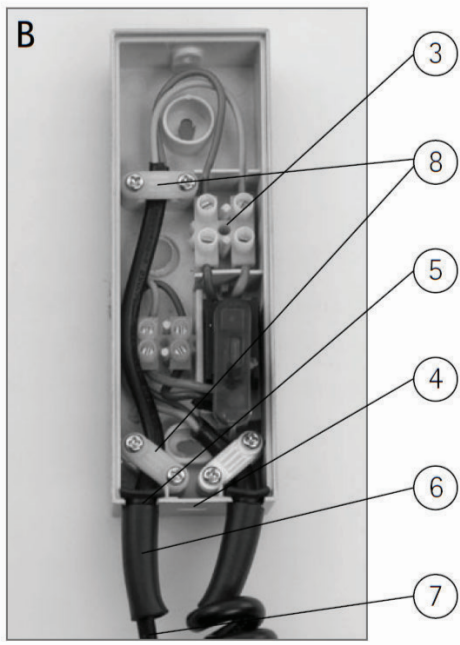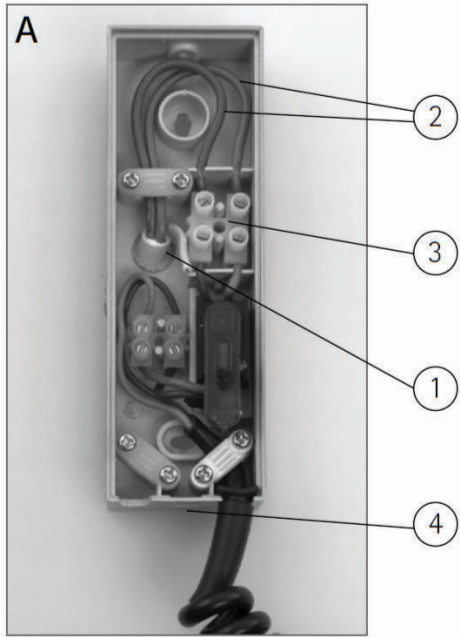

---

## Installation Wall Holder

### for fixed connection lead (A):

1. Break the cable leadthrough (1) in the rear wall of the wall bracket.
2. Pull the cable wires (2) coming out of the wall through the open leadthrough (1).
3. Fix the rear wall to the wall using normal plugs and wood screws.
4. Fix the cable wires (2) in the terminal (3) as illustrated. To do so, remove the terminal (3) and then put it back again.
5. After testing the hair dryer, place the wall bracket housing in this position and fasten with the housing screw (4).

### for socket connection lead (B):

1. Break the membrane (5) in the lower edge of the rear wall to take the second protective sleeve (6).
2. Fasten the rear wall to the wall with normal plugs and wood screws.
3. Pull the protective sleeve (6) over the power lead (7).
4. Connect the power lead (7) to the terminal (3) as illustrated. To do so, remove the terminal (3) and then put it back again.
5. Place the protective sleeve (6) in the provided slot and secure the lead (7) as illustrated with strain reliefs (8) using two screws.
6. After testing the hair dryer, place the wall bracket housing in its position and fasten with the housing screw (4).



# SPL Comprehensive Warranty

The Aliseo hair dryers are fully guaranteed against defective materials and faulty workmanship for a period of 12 months from date of sale, subject to being installed and maintained in accordance with the manufacturer's instructions.

This warranty does not cover damage due to misuse, abuse, and dropping the hair dryer, or from hair blocking air inlets.

Warranties are restricted to guestrooms and in-room use only, and installation in other areas such public areas, gymnasiums, pool changing rooms is at the owner's risk.

Note: Our warranty only extends to products purchased and installed in New Zealand.

SPL Limited  
PO Box 437, Cambridge 3450  
New Zealand

p. +64 7 823 5790  
e. [office@splwashrooms.co.nz](mailto:office@splwashrooms.co.nz)

---

**SPL**