


# DAN DRYER

## BABY

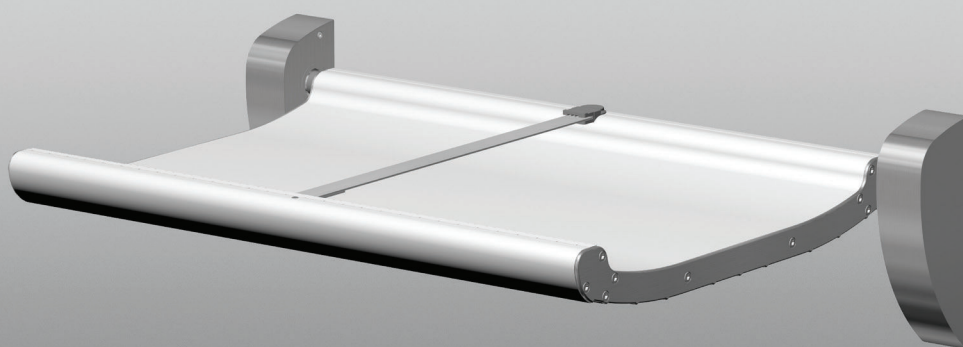

Installation  
& maintenance  
instructions.

## General Safety Information

- This product is intended for children up to a maximum weight of 400kgs.
- DO NOT leave your child unattended while using a baby change table.
- DO NOT add a changing pad to this product.
- Always use safety belt.
- Forbid children from hanging from the unit to avoid risk of falling.
- Be aware of the risk of open fires and other sources of strong heat, such as electric heaters, gas fires, etc in the near vicinity of the baby change table.
- Adding excessive weight to the unit that exceeds the total weight limit of 400kgs may cause a hazardous, unstable condition to occur.
- Do not use the changing table when any part is broken, torn or missing.

## Warning

- The baby change table is no stronger than the anchors or wall to which they are attached and therefore **MUST** be firmly secured in order to support the weight they are intended to support. Contact a builder or architect if you have any questions relating to installation.
- To assure proper installation, it is suggested that a qualified person or registered building practitioner install the baby change table.  
SPL (2021) Ltd will not be liable if the unit is not installed properly.
- Any object left on table will become entrapped in mechanism and cause damage when table is closed. Safety of table could be compromised and warranty invalidated.

## NB:

- The baby change table is designed for use indoors in a dry environment and must **NOT** be used in damp or high chlorine environments.

# Operating Instructions and Parts Manual

Please read all instructions carefully before attempting to install the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and / or property damage. Retain instructions for future reference.

## Dan Dryer Baby Change Table

Wall mounted baby change table powder coated aluminium to add a designer look to any commercial bathroom. Strong materials with rounded edges for optimal safety with a unique weight capacity of 400kg. Adjustable safety belt helps to protect the safety of baby.

## Specifications

|              |                                                                |
|--------------|----------------------------------------------------------------|
| Colour       | White                                                          |
| Load Support | Up to 400kgs                                                   |
| Unit Weight  | 17kgs (net)                                                    |
| Material     | Aluminium and brushed stainless steel                          |
| Dimensions   | 967W x 782H x 100D mm (closed)<br>967W x 269H x 626D mm (open) |
| Standards    | Complys with EN12221                                           |
| Fixing       | Not included                                                   |
| Warranty     | 12 months                                                      |
| Product Code | DDBCHW                                                         |

## Planning

Masonry or wooden double stud blocking is necessary.

When positioning baby change table, take note of traffic flows in the washroom, also be aware of obstruction doors, cabinets etc.

Do not mount the table near strong sources of heat, e.g. fireplaces, stoves etc.

# Recommended Mounting Heights

There are no fixed or regulated height at which the table is mandated to be fitted. As a guide, we recommend a mounting height of between 750 - 950mm.

## Important:


The table may only be mounted to a wall with proper interior blocking or structure to bear the weight of the unit (18kg) and the maximum load of (400kg).

Select the correct mounting fasteners for the specific wall type. Consult an expert for advice. Screws in the wall bracket are exposed to a force equivalent to 65kg of pull each at maximum load on the table when 4 screws are used in the upper holes.

## Marking and Drilling Holes

We recommend to mount fasteners in each of the mounting holes to obtain maximum strength and stability.

- Mark and drill 4 x holes as indicated on Fig 1.
- Fixing type will depend on substrate, but recommend 10mm x 80mm (plus metal washer) and wall anchor if applicable.

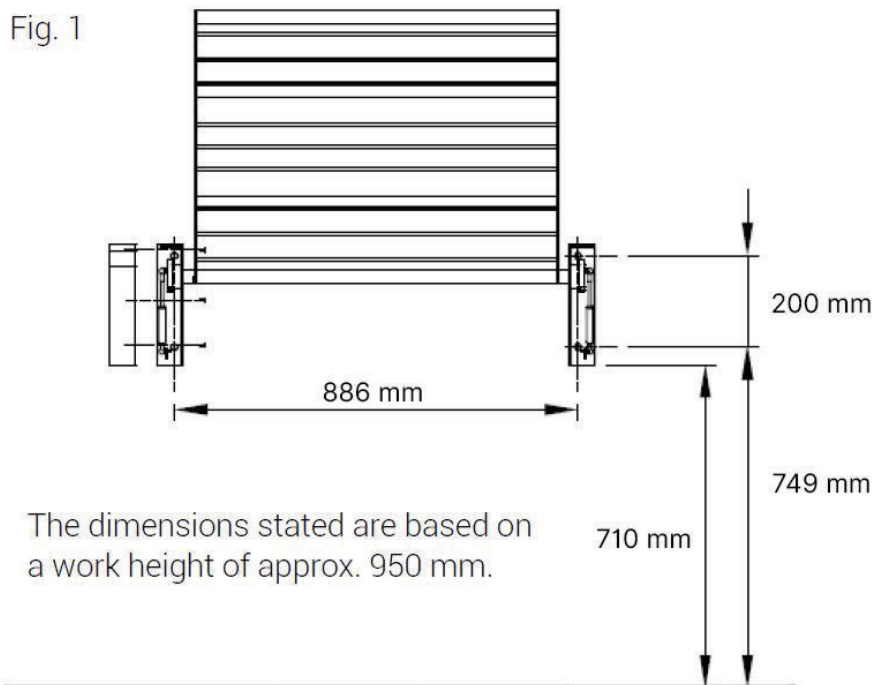

**IMPORTANT:** Be sure to drill the holes for the mountings exactly vertically underneath each other, or the pneumatic shock absorbers inside the mountings may break.

# Installation Instructions

## Mounting:

1. Disassemble the cover plates of the table mountings by removing the 6 screws (3 on each) with a Torx screwdriver #20.
2. Mount the table onto the wall, making sure that it is completely level.
3. The baby change unit is factory pre-adjusted to easily close when given a slight push from open position.
4. Check that the changing table is mounted flush to the wall.
5. Check that the shock absorbers can pass freely when opening and closing the table.
6. Reassemble the cover plates onto the mountings.

## User Instructions

The table can be folded down to a horizontal position by carefully pulling the top edge downwards. Make sure the table is fully extended into its horizontal position before use.

This table is not intended to be used with a mattress. Use a paper towel or the like instead.

Always check that the table surface is clean and undamaged before use. Do not use if damaged, defective or if not securely fixed to the wall.

Fold the table into its upright position after use by lifting the front edge of the table and carefully raising it to the vertical.



## Cleaning Instructions

The table can be cleaned using a damp cloth. Use only neutral, liquid cleaning products that do not contain solvents. Do not hose or high-pressure wash with water or other liquids.

## Maintenance Instructions:

We recommend inspecting the table regularly and at least once annually according to the following:

- Check that the table is securely fixed to the wall, that all moving parts work correctly and are in a safe condition (including the safety belt).
- Check that all screwed assemblies are tight.
- Check that the table can fold up and remain in the upright position. A force equivalent to approx. 3 kg is normally required to fold down the table.
- Check that the table cannot drop beyond horizontal when folded down. Normally, the table will stay in any position when released.
- If the table is defective, it must be repaired and restored to usable condition immediately.

| Problem:                                      | Solution:                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The table cannot remain closed.               | <ul style="list-style-type: none"><li>• The springs are worn and should be replaced immediately. Do not allow use of the table before it is repaired.</li></ul>                                                                                                                                                                                                                         |
| The table is not horizontal when folded down. | <ul style="list-style-type: none"><li>• The table is not securely fixed to the wall. Check mounting and repair immediately. Do not allow use of the table before it is repaired.</li><li>• More than the maximum permitted weight of 400kg has been placed on the table, which has been permanently damaged as a result. Do not allow use of the table before it is repaired.</li></ul> |

# Supreme Comprehensive Warranty

Your Baby Change is fully guaranteed against defective materials and faulty workmanship commencing from the date of sale (according to SPL's records), subject to it being installed and maintained in accordance with the manufacturer's instructions.

SPL (2021) Limited warrants that should any part fail within the given warranty period (12 months), it will be remedied by SPL. The change table should be returned to SPL (2021) Limited for all warranty claims. The cost of cartage will be payable by the customer.

This warranty excludes:

- Incorrect installation, or installation that does not specifically follow the installation guidelines supplied
- Failure to follow manufacturer's maintenance instructions
- Damage/Failure resulting from:
  - the use of non-authorised parts
  - authorised parts not installed in accordance with the manufacturer's instructions
  - accidental damage, negligent use, misuse, vandalism, neglect
  - damage caused either directly or indirectly by external sources (natural disaster, or insect infestation)
- Water ingress caused by property maintenance or flooding
- Negligent cleaning practices (harmful chemical etc)

*The above includes consequential damage to any other goods, furnishings, or property.*

- Normal wear and tear and consumable parts
- This warranty does not displace any statutory warranty in relation to the change table but any liability of SPL (2021) Limited under any statutory warranty will be limited to a replacement or repair of the change table or payment of the cost of such replacement or repair at the sole discretion of SPL (2021) Limited

Note: Our Warranty only extends to products purchased and installed in New Zealand.

SPL Limited  
Cambridge 3434  
New Zealand

p. +64 7 823 5790  
e. [office@splwashrooms.co.nz](mailto:office@splwashrooms.co.nz)